


---

# UVG

## Installation Guide

---

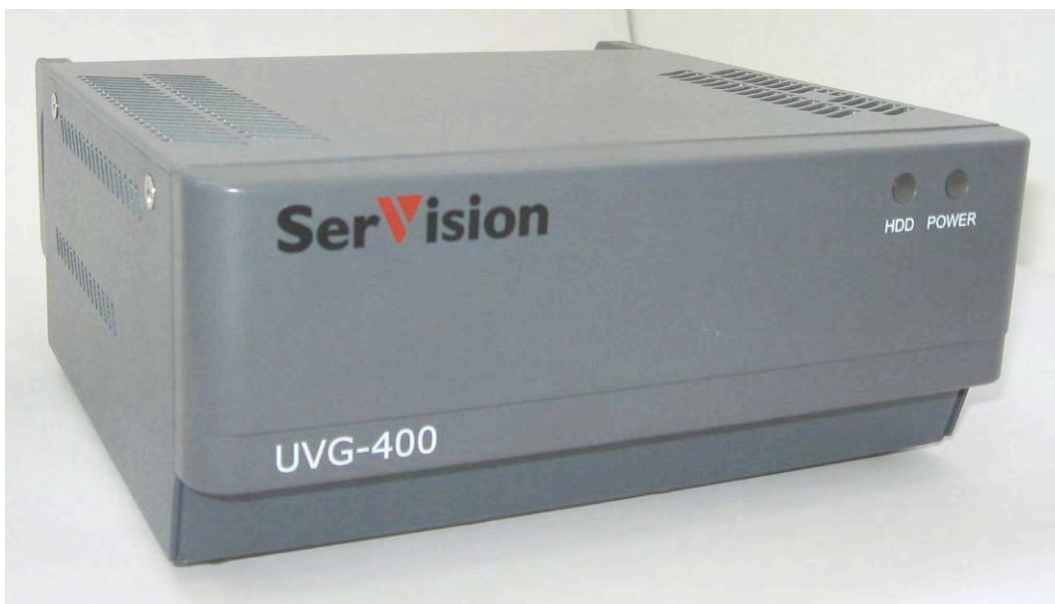

**SerVision**

---

January  
2011

---

---

## Trademarks & Copyright

### Trademarks

All trademarks mentioned in this manual are the sole property of their respective manufacturers.

### Copyright

SerVision Ltd., Jerusalem, Israel

[www.servision.net](http://www.servision.net) • [info@servision.net](mailto:info@servision.net)

© 2011 SerVision Ltd. All rights reserved.

### Notice

Information in this document is subject to change without notice. SerVision Ltd. assumes no responsibility for any errors that may appear in this manual. Companies, names and data used in examples herein are fictitious unless otherwise noted. No part of this document may be copied or reproduced in any form, or by any means, electronic or mechanical, for any purpose, without the express written permission of SerVision Ltd. SerVision Ltd. makes no warranties with respect to this documentation and disclaims any implied warranties of merchantability or fitness for a particular purpose.

---

# Table of Contents

<b>Introduction</b>	<b>4</b>
<b>The UVG Package</b>	<b>5</b>
<b>Additional Equipment</b>	<b>6</b>
<b>Installing the UVG System</b>	<b>7</b>
Selecting a Location for the Unit	7
Diagram of the Rear Panel	7
<b>Connecting Devices to the UVG</b>	<b>10</b>
Connecting Cameras	10
Connecting PTZ Controllers	10
Connecting Sensors	11
Connecting a Sensor Directly to the Unit	12
Connecting Sensors Using an ADAM Module	12
Connecting Activators	16
Connecting Sensors and Activators Using an IA Relay Board	16
Connecting Microphones	18
Connecting a Speaker or Headphones	18
Connecting a CCTV Monitor	19
Connecting the Mouse	19
Connecting a Switch	20
Connecting Multiple Monitors	20
<b>Setting Up Network Connections</b>	<b>21</b>
Connecting the UVG to an External Network	21
Connecting Devices to the UVG's Internal Network	21
<b>Connecting the UVG to a Power Source</b>	<b>23</b>

## Introduction

This guide explains how to set up the hardware components of SerVision's UVG security system. The UVG belongs to SerVision's line of TVG video gateway units. These units provide state-of-the-art security functionality, including live video streaming, video recording and playback, motion detection, sensor management, real-time event notification, and device activation. All of these features can be accessed remotely via PC, PDA, or cellular telephone.

The UVG can stream video and other security data to users via cabled Ethernet connection or wirelessly via WiFi or cellular networks. This versatility makes it ideal for securing locations in which cabled connections are not available: garages, stables, parking lots, construction areas, etc.

Once the UVG has been installed as explained in this guide, it must be configured. Configuration is performed by connecting to the UVG unit using a PC that is on the same network as the unit (or connected to the unit directly using a LAN cross cable) and opening the unit's configuration utility in a browser. For additional information about configuring your UVG, please refer to the *TVG System Guide*.

*Client software* is used for accessing the UVG unit remotely in order to view video and events and control the system in various ways. SerVision offers client software for PCs and for certain cellular telephone and PDA models. Full instructions for the use of the client applications are available in separate manuals, which can be downloaded at <http://www.servision.net>.

# The UVG Package

The UVG package contains the following items:

Item	Description	Illustration
UVG unit	Video gateway	
Power supply cable	Connects the unit to an electrical outlet	
Ethernet (LAN) cable	Connects the unit to a network	
RS232/485 serial adapter	Connects PTZ controllers to the unit	
Mouse	Mouse for use with CCTV monitors	

---

## Additional Equipment

Up to four video cameras can be connected to the UVG. You must acquire the cameras you require; they are not included in the UVG package. For information about camera compatibility and about connecting the cameras to the unit, see *Connecting Cameras*, page 10, or consult your vendor.

In addition to the cameras, you may wish to incorporate some or all of the optional equipment listed below into your security system. For additional information about these items and the cables required to connect them, please refer to the installation instructions for each type of device.

**NOTE:** This equipment is not included in the UVG package.

- Cellular modem with USB adaptor (see *Connecting the UVG to an External Network*, page 21)  
**Note:** Not all cellular modems are supported. Please contact your UVG supplier or SerVision technical support for a list of supported cellular modems.
- USB extension cord for connecting the cellular modem to the unit; the modem functions best if it is installed as high up as possible and in an exposed location (see *Connecting the UVG to an External Network*, page 21)  
**Note:** The extension cord should not be longer than about 1.5 meters.
- WiFi card with USB adaptor (see *Connecting the UVG to an External Network*, page 21)  
**Note:** Not all WiFi cards are supported. Please contact your UVG supplier or SerVision technical support for a list of supported WiFi cards.
- Up to four dry-contact sensors (see *Connecting Sensors*, page 11)  
**Note:** Up to four dry-contact sensors can be connected directly to the UVG unit. If you use either an ADAM module or an IA relay board, as described below, you can connect an additional 16 dry-contact sensors via the unit's **RS232/485** connector.
- ADAM Data Acquisition Module and ADAM isolated RS232->RS422/RS485 converter, for connecting up to 16 dry-contact sensors (see *Connecting Sensors*, page 11)
- Intelligent Appliance IA-3126-2 relay board, for connecting up to 16 dry-contact sensors (see *Connecting Sensors and Activators Using an IA Relay Board*, page 16) and 16 activators to the UVG unit
- Up to two dry-contact activators (alarms or other devices that are turned on or off in response to the activation of a sensor; see *Connecting Activators*, page 16)  
**Note:** Up to two activators can be connected directly to the UVG unit. If you use an IA relay board, as described above, you can connect an additional 16 activators via the unit's **RS232/485** connector.
- Up to two microphones (see *Connecting Microphones*, page 18)
- Speaker or headphones (the unit already contains a built-in speaker; see *Connecting a Speaker or Headphones*, page 18)
- CCTV monitor for closed-circuit video display (see *Connecting a CCTV Monitor*, page 19)
- Push-button switch to change the display in a connected CCTV monitor (see *Connecting a Switch*, page 20)
- Toggle (on-off) switch to change the active outline (see *Connecting Sensors*, page 11)

---

## Installing the UVG System

These are the steps that you will typically follow in order to install the UVG system:

1. Place the UVG unit in its desired location; see *Selecting a Location for the Unit*, page 7.
2. Install the video cameras in their desired locations.
3. Install the sensors in their desired locations (optional).  
**Note:** Four sensors can be connected directly to the unit; another 16 must be connected through an ADAM module or an IA relay board; see *Connecting Sensors*, page 11.
4. Install a toggle switch to change the active outline (optional); see *Connecting Sensors*, page 11.
5. Install the activators in their desired locations (optional).  
**Note:** Two activators can be connected directly to the unit; another 16 can be connected through an IA relay board; see *Connecting Activators*, page 16.
6. Install a CCTV monitor in its desired location (optional).  
**Note:** If you want to use a mouse to control the monitor display, place the monitor close to the UVG unit, because the mouse is plugged into the unit, not into the monitor.
7. Install a push-button switch in its desired location (optional); the push-button switch can be used to change the display on the CCTV monitor, if a monitor is connected to the unit; see *Connecting Sensors*, page 11.
8. Connect the cameras and other devices to the UVG and to a power supply, as required; see *Connecting Devices to the UVG*, page 10.
9. Place the cellular modem in an appropriate location in the vehicle and connect it to the unit using a USB extension cord (optional); see *Connecting the UVG to an External Network*, page 21.
10. Connect the WiFi adaptor to the unit (optional); see *Connecting the UVG to an External Network*, page 21.
11. Connect the unit to a LAN using an Ethernet cable (optional); see *Connecting the UVG to an External Network*, page 21.
12. Install any devices that will be connected to the UVG's internal network in their desired locations. Connect them to a power source and to the unit (optional); see *Connecting Devices to the UVG's Internal Network*, page 21.
13. Connect the UVG unit to a power source; see *Connecting the UVG to a Power Source*, page 23.

## Selecting a Location for the Unit

The UVG unit should be placed on a flat surface such as a table or shelf. (It is not designed for mounting directly on a wall.) Ensure the unit has at least a few centimeters (1–2 inches) of space above it and on all sides for ventilation.

When choosing a location for the UVG, bear in mind that the unit must be connected to a power outlet and a LAN or a PC, and that other devices (cameras, sensors, etc.) must be connected to it. Choose a location in which these connections are feasible.

## Diagram of the Rear Panel

The rear of the UVG unit contains the connectors and controls described below.

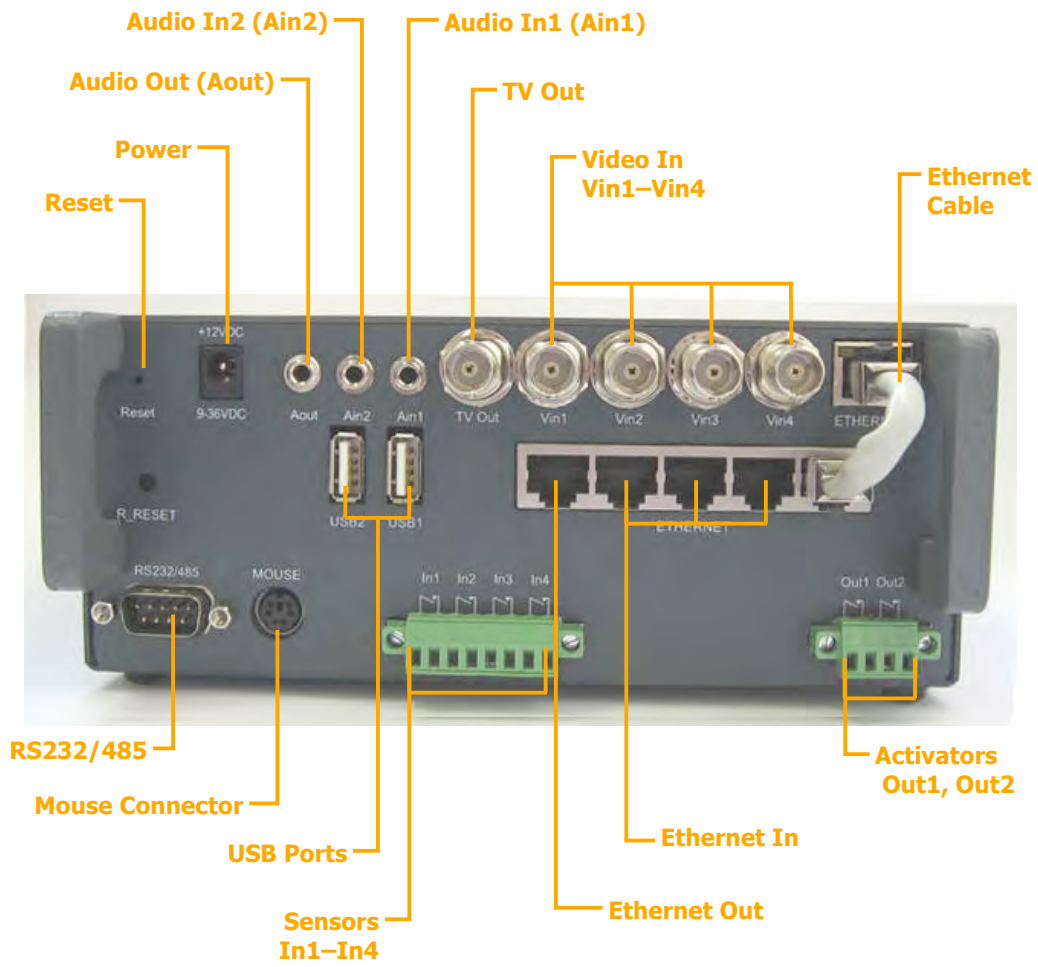


Figure 1: UVG connectors and controls

Connector/Control	Description
Reset	<p><b>Reset</b> button. Use a pin to press the button when it is necessary to reset the unit manually.</p> <p><b>Note:</b> Your configuration settings will not be lost during a reset.</p>
Power	Connector for the power supply and, if required (see page 23)
Audio Out (Aout)	Connector for an external speaker or headphones (see page 18)
Audio In2 (Ain2)	Connector for an active microphone (see page 18)
Audio In1 (Ain1)	Connector for a passive microphone (see page 18)
TV Out	Connector for a CCTV monitor (see page 19)
Video In (Vin1–Vin4)	Connectors for video cameras (see page 10)
Ethernet Cable	Cable connecting the video gateway component of the UVG to the unit's router. Do not disconnect.
RS232/485	Serial (COM) port for PTZ controllers (see page 10), ADAM modules (see page 12), or technicians' use
Mouse Connector	Mouse connector (for the supplied PS2 mouse only; see page 19)
USB Ports	Connectors for WiFi cards or cellular modems with USB adaptors (see page 21)
Sensors (In1 – In4)	Sensor connectors (see page 11)
Ethernet Out	10/100 Base-T LAN connector for connecting the unit to an external network (LAN or WAN; see page 21.)
Ethernet In	Three 10/100 Base-T LAN connectors for connecting other devices to the internal network managed by the UVG's router (see page 21)
Activators (Out1, Out2)	Activator connectors (see page 16)

## Connecting Devices to the UVG

This section explains how to connect cameras, sensors, activators, microphones, a speaker or headphones, and a CCTV monitor to the UVG unit.

### Connecting Cameras

Up to four cameras can be connected to the UVG. If the cameras have PTZ controls for remote aiming and zooming, and the PTZ protocols they use are supported, the control cables can also be connected to the unit.

Any PAL or NTSC video camera with a composite video output can be connected to the unit. A cable with a composite video connector on one end, and a male BNC connector on the other, should be used to connect each camera to the UVG.

**NOTE:** A cable with a male RCA connector can be connected to a female BNC connector by using an RCA-to-BNC adaptor.



*Figure 2: RCA-to-BNC adaptor*

#### ⇒ **To connect a camera:**

1. Install the camera in its desired location.
2. Connect the output of the camera to one of the **Video In** connectors on the rear panel of the unit.
3. Connect the camera's power connector to a power source.

### Connecting PTZ Controllers

If a camera has remote PTZ control features (pan, tilt, zoom, and/or focus), and uses a supported PTZ protocol, you can connect the control cable to the unit. Both RS232 and RS485 PTZ connection types are supported. Consult the camera documentation for information about which connection type to use.

**NOTE:** If you are connecting sensors to the unit using an ADAM module, you cannot connect any RS232 PTZ controllers to the unit. For additional information, see *Connecting Sensors Using an ADAM Module*, page 12.

If you want to connect the PTZ controllers of multiple cameras to the unit, only one of the controllers can use an RS232 connector – the others must all use RS485 connectors. PTZ controllers for more than one RS232 camera cannot be connected to the unit simultaneously.

If you connect multiple RS485 PTZ camera controllers, they should be daisy-chained to the **RS232/485** connector, as described below. In this case, each camera in the chain must be given a different ID number. Please refer to your camera's documentation for information about configuring its ID number. In addition, note that you can only create an RS485 daisy chain if every link on the chain (i.e., every camera) uses the same PTZ protocol. Attempting to connect cameras that use different protocols will prevent all of the cameras from working properly.

### ➤ **To connect an RS232 PTZ controller:**


The RS232 controller cable should end with a female 9-pin RS232 connector.

- If you are only connecting the RS232 PTZ controller to the unit, and are not connecting any RS485 PTZ controllers, plug the 9-pin RS232 connector directly into the **RS232/485** connector on the rear panel of the unit.
- If you are also connecting one or more RS485 PTZ controllers to the unit, plug the 9-pin RS232 connector into the RS232/485 adapter supplied with the unit.

### ➤ **To connect an RS485 PTZ controller:**

Each RS485 controller cable should end with two wires.

1. Use a wire connector to connect the wires to the RS485 connection wires of the adapter. Be sure to match the positive (+) wire of the controller cable to the positive (+ red) wire of the adapter, and the negative (-) wire of the controller cable to the negative (- grey) wire of the adapter (see figure 3).

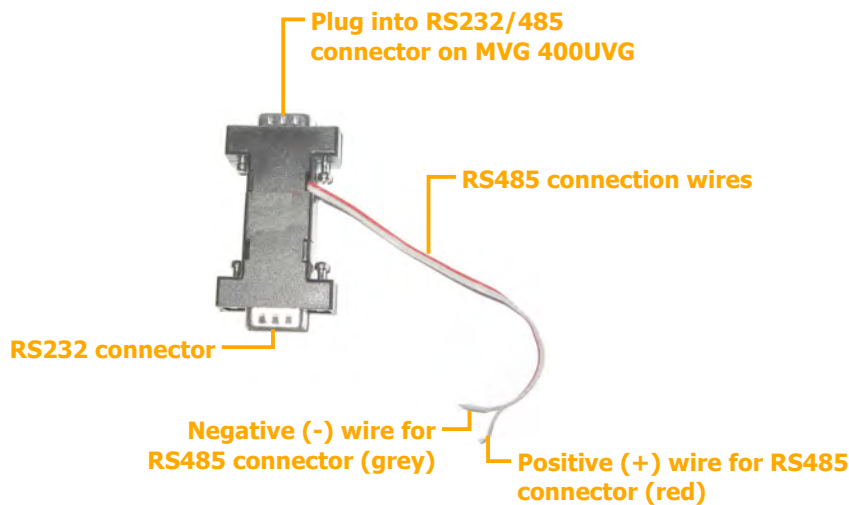

**Figure 3: RS232/485 adapter**

To connect multiple RS485 controllers to the adapter, insert the positive (+) wires of all of the controllers into one slot in the wire connector, and the negative (-) wires of all of the controllers into the other slot of the wire connector.



**Figure 4: Wire connector**

2. If multiple PTZ cameras are connected to the unit, configure each camera to use a different ID. For information about how to do this, refer to the camera documentation.
3. Connect the RS232/485 adapter to the **RS232/485** connector on the rear panel of the unit.

## Connecting Sensors

Sensors are devices that detect events such as a door being opened or a light being turned on. Up to four dry-contact input sensors can be connected directly to the unit. In addition, if you wish, you can connect either an ADAM Data

Acquisition Module or an IA-3126-2 relay board to the unit. Either of these devices makes it possible to connect up to 16 additional sensors to the unit.

Sensor 1 and Sensor 4 can be used as switches instead of sensors. The switches can be used to activate outlines and to change the display on a CCTV monitor.

## Connecting a Sensor Directly to the Unit

The unit has four Input connectors (**In1** – **In4**). You can use these connectors to connect up to four dry-contact input sensors directly to the unit. Alternatively, **In1** and **In4** can be used to connect switches as follows:

- **In1**: If you are defining more than one outline (alternate sets of recording and event-handling settings), you can connect a toggle (on-off) switch to **In1** instead of a sensor. The switch can then be used to change the active outline. For additional information, please refer to the *TVG System Guide*.

**Note:** Some alarm panels can also be connected to **In1**. When they are, they can function as automatic outline toggle switches. For additional information, please consult the alarm panel vendor.

- **In4**: If a CCTV monitor will be connected to the unit, you can connect a push-button switch to **In4** instead of a sensor. The button can then be used to change the display on the monitor. For additional information, see *Connecting a CCTV Monitor*, page 19 and refer to the *TVG System Guide*.

### ⇒ To connect a sensor or switch directly to the unit:

1. Install the sensor or switch in its desired location in accordance with the manufacturer's instructions.
2. Connect the two wire contacts of the sensor or switch to the Sensors terminal block on the rear panel of the UVG, as illustrated in figure 5. Insert the wires into the connectors and tighten the screws below each connector to hold the wires in place.

**Note:** The wires must be connected to two adjacent contacts in the same group (e.g. the two contacts of “**In1**”), but the polarity does not matter.

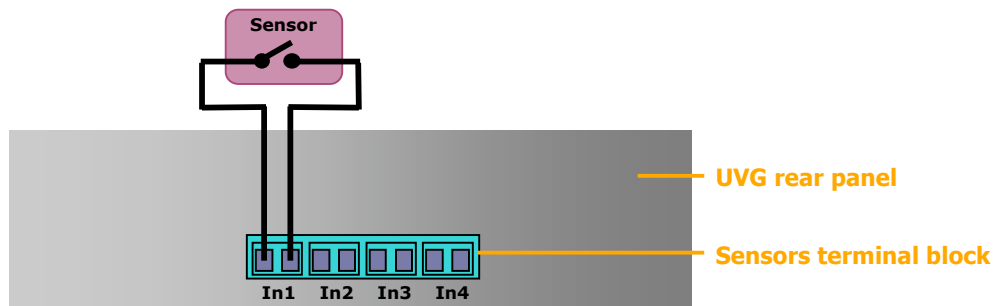


Figure 5: Connecting a sensor

## Connecting Sensors Using an ADAM Module

If you want to connect additional dry sensors to the UVG, you can do so by connecting an ADAM Data Acquisition Module to the unit. Up to 16 additional dry sensors can then be connected to the unit through the ADAM module.

**NOTE:** Alternatively, you can connect additional sensors using an IA-3126-2 relay board, as explained *Connecting Sensors and Activators Using an IA Relay Board*, page 16.

To connect sensors using an ADAM module, you will need the following items:

- ADAM-4051 Data Acquisition Module (available from SerVision)
- ADAM-4520 isolated RS232->RS422/RS485 converter (available from SerVision)

- Flat ribbon cable with D-type 9-pin female connector on one end and a D-type 9-pin male connector on the other end
- Wire to connect the ADAM module to the ADAM converter – red, black, yellow, and green
- Wire and an electrical plug (optional) to connect the ADAM module to a power source



*Figure 6: ADAM-4051 module*




*Figure 7: ADAM-4520 isolated converter*

**NOTE:** The instructions below explain how to connect sensors to the UVG using the ADAM module and converter described above. For additional information about connecting and configuring the ADAM module and converter, please refer to the manufacturer's documentation, or contact your vendor.

⇒ **To connect sensors using an ADAM module:**

1. Install the sensors in their desired locations in accordance with the manufacturer's instructions.
2. Connect the wire contacts of each of the sensors to the terminal blocks of the ADAM-4051 module as follows:
  - Connect all of the negative (-) wires of all of the sensors to one of the ground (**D GND**) connectors on the ADAM module. If the wires cannot all be inserted into the connector, use a wire connector to connect them together, and then connect the wire connector to the ground (**D GND**) connector on the ADAM module.
  - Connect each of the positive (+) sensor wires to one of the numbered connectors (**D1 0** through **D1 15**) in the terminal blocks of the module.

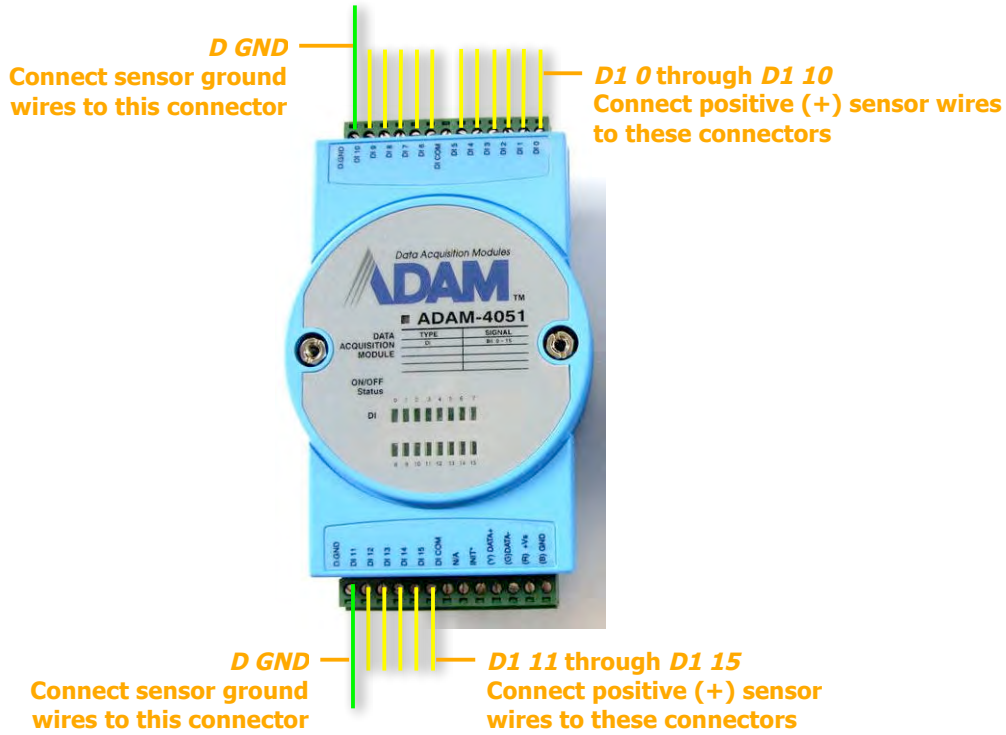


**Figure 8: Connecting sensors to the ADAM-4051 module**

3. Connect the ADAM-4051 module to the ADAM-4520 isolated converter as follows (see figure 10, page 15):

Connect this connector on the ADAM-4051	To this connector on the ADAM-4520
(Y) Data+	Data+
(G) Data-	Data-
(R) +Vs	(R)+Vs
(B) GND	(B)GND

4. Connect the ADAM-4520 isolated converter to the **RS232/485** connector on the rear panel of the UVG unit in one of the following ways:
  - If you are not connecting any RS485 PTZ controllers to the unit, using the 9-pin flat ribbon cable, connect the RS232 connector of the ADAM-4520 converter directly into the **RS232/485** connector.
  - If you are also connecting one or more RS485 PTZ controllers to the unit, using the 9-pin flat ribbon cable, connect the RS232 connector of the ADAM-4520 converter into the RS232 connector of the RS232/485 adapter supplied with the unit. Connect the PTZ controllers to the adaptor as explained under *Connecting PTZ Controllers*, page 10. Then plug the adaptor into the **RS232/485** connector on the unit.

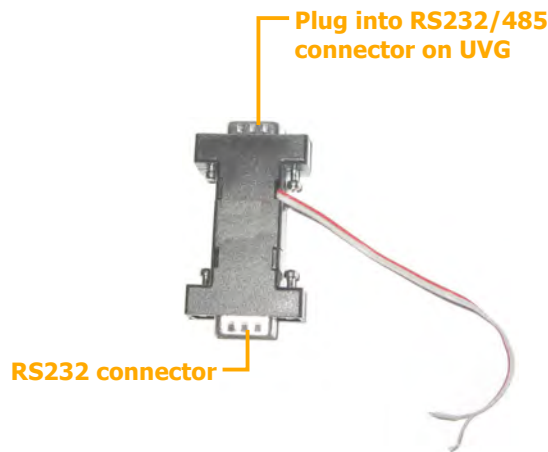


**Figure 9: RS232/485 adapter**

**Note:** If you connect an ADAM module to the unit, you cannot connect any RS232 PTZ controllers or an IA relay board to the unit. For additional information about connecting PTZ controllers to the unit, see *Connecting PTZ Controllers*, page 10. For information about connecting an IA relay board to the unit, see *Connecting Sensors and Activators Using an IA Relay Board*, page 16.

5. Connect the ADAM-4051 module to the power source as follows (see figure 10, page 15):
  - Connect the positive (+) wire of the power supply cable to the **(R) +Vs** connector on the module
  - Connect the negative (-) wire of the power supply cable to the **(B) GND** connector on the module

**Note:** Each of the power connectors on the module will then have two wires connected to it – one connecting it to the power supply, and one connecting it to the power connectors of the ADAM-4520 converter.

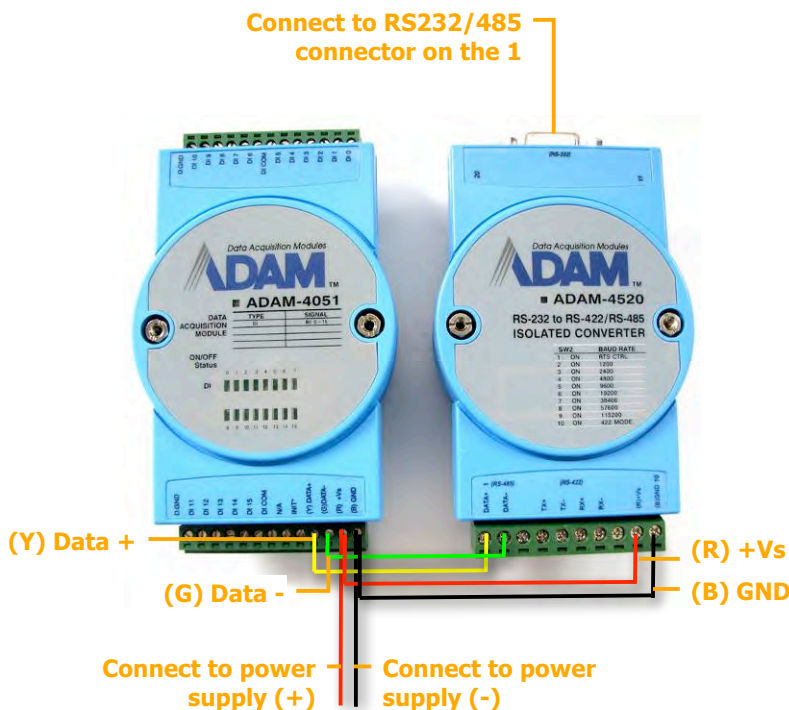

**Figure 10: Connecting the module to the converter, the UVG, and the power supply**

## Connecting Activators

Activators are external devices such as alarms and lights that can be turned on by the system in response to an event. Essentially, the unit functions as an on/off switch for these devices. The unit activates an activator by closing the circuit of its power supply. Two activators can be connected directly to the unit. In addition, if you wish, you can connect an IA-3126-2 relay board to the unit. This makes it possible to connect up to 16 additional activators to the unit (see *Connecting Sensors and Activators Using an IA Relay Board*, page 16).

In addition to the activators themselves, you will need the 16 AWG red and black cables to connect each activator to the unit.

### ⇒ To connect an activator:

1. Install the activator in its desired location in accordance with the manufacturer's instructions.
2. Connect the two contacts of the activator to the Activators terminal block on the rear panel of the UVG, as illustrated in figure 11.

**Note:** The wires must be connected to two adjacent contacts in the same group (e.g. the two contacts of “Out1”), but the polarity does not matter.

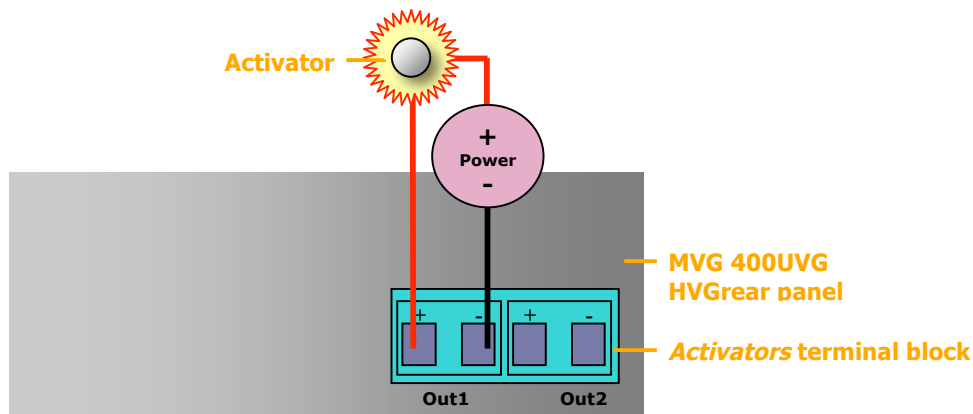


Figure 11: Connecting an activator that has its own power supply

## Connecting Sensors and Activators Using an IA Relay Board

If you want to connect additional dry sensors and/or two activators to the UVG, you can do so by connecting an Intelligent Appliance IA 3126-2 relay board to the unit. Up to 16 additional dry sensors and 16 additional activators can then be connected to the unit through the relay board. Sensor and activator events from devices connected to an IA relay board can be seen in SerVision client applications and activators can be turned on and off via these applications. However, the sensors and activators cannot be configured using the UVG’s configuration utility.

**NOTE:** Alternatively, you can connect additional sensors using an ADAM module, as explained under *Connecting Sensors Using an ADAM Module*, page 12. Sensors that are connected through an ADAM module can be configured using the UVG’s configuration utility.




*Figure 12: IA 3126-2 relay board*

For information about connecting sensors and activators to the IA 3126-2 relay board, and about connecting the relay board to a power source, please consult the relay-board's documentation.

**NOTE:** If you are connecting less than 16 activators or 16 sensors to the relay board, be sure to connect them to the relay beginning with the lowest connector, and do not leave open connectors between those that you use. For example, if you are connecting 4 activators and 3 sensors, connect the activators to output connectors 1-4 on the board and the sensors to input connectors 1-3 on the board.

➡ **To connect the IA 3126-2 relay board to the UVG:**

1. Set the ID of the relay board to 0. (For information about how to do this, consult the relay-board documentation.)
2. Connect the relay board to the **RS232/485** connector on the rear panel of the UVG unit in one of the following ways:
  - If you are not connecting any RS485 PTZ controllers to the unit, using a 9-pin flat ribbon cable, connect the RS232 connector of the relay board directly into the **RS232/485** connector.
  - If you are also connecting one or more RS485 PTZ controllers to the unit, using a 9-pin flat ribbon cable, connect the RS232 connector of the relay board into the RS232 connector of the RS232/485 adapter supplied with the unit. Connect the PTZ controllers to the adaptor as explained under *Connecting PTZ Controllers*, page 10. Then plug the adaptor into the **RS232/485** connector on the unit.

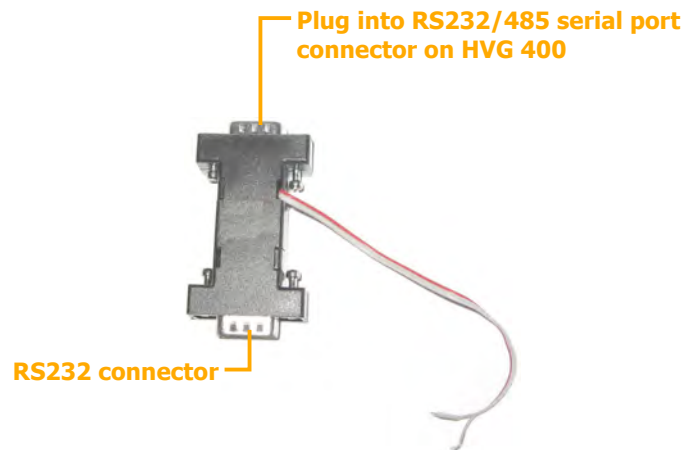

**Figure 13: RS232/485 adapter**

**Note:** If you connect a relay board to the unit, you cannot connect any RS232 PTZ controllers or an ADAM module to the unit. For additional information about connecting PTZ controllers to the unit, see *Connecting PTZ Controllers*, page 10. For information about connecting an ADAM module to the unit, see *Connecting Sensors Using an ADAM Module*, page 12.

## Connecting Microphones

Up to two microphones can be connected to the unit, one active and one passive. When one or two microphones are connected, you can hear and record sound along with video images. The sound from a microphone can be associated with any or all of the cameras. (For additional information, please refer to the *TVG System Guide*.)

Microphones can be connected to one or both of the **Audio In** connectors (**Ain1** and/or **Ain2**). Passive microphones, which require external amplification, must be connected to **Ain1**. Active (self-amplifying) microphones must be connected to **Ain2**. Microphones with an output voltage of 1 Vrms or 1.41 Peak are supported.

### ⇒ **To connect a microphone:**

1. Install the microphone in the desired location.
2. Plug the microphone connector into the desired **Audio In** connector (**Ain1** or **Ain2**).

## Connecting a Speaker or Headphones

The UVG unit contains a built-in, 1-watt, internal speaker, which is located on the right side of the unit. You can also connect an external speaker or headphones to the unit. The speakers (and headphones) allow you to hear audio that is transmitted from one of the client applications. In addition, if you are viewing recorded video on a CCTV monitor, these speakers can broadcast the audio associated with the video. The external speaker or headphones can be used in addition to the internal speaker or instead of it. (For additional information, please refer to the *TVG System Guide*.)



**Figure 14: Internal speaker**

⇒ **To connect a speaker or headphones:**

1. Install the speaker in its desired location, if necessary.
2. Plug the speaker or headphone connector into the **Audio Out (Aout)** connector.

## Connecting a CCTV Monitor

You can connect a CCTV monitor to the unit. The monitor offers an alternative way to view live or recorded video from the UVG. It is primarily useful if you want to view video when you are near the unit. For example, if the UVG is set up in a grocery store, and you sit at the check-out counter, you can use a CCTV monitor to keep tabs on parts of the store that you cannot see from your seat.

The following types of monitors can be used:

- Surveillance monitors: Monitors that are designed to be plugged directly into surveillance cameras.
- Entertainment monitors: Monitors that are intended to be plugged into portable DVD players in vehicles.
- Standard television sets with AV connectors

When choosing a monitor to connect to the unit, ensure the monitor supports the video format used by the cameras (NTSC or PAL). Some SECAM monitors will also work when the PAL video format is used.

To connect the monitor to the UVG, you will need a cable with the following connectors:

- An appropriate connector (BNC or RCA) for the Video In connector of the monitor. (Consult the monitor documentation or your vendor to find out which kind of connector is required for the particular monitor you are using.)
- A BNC male connector to connect to the **TV Out** connector of the UVG. (A cable with an RCA connector can be used by attaching a BNC-to-RCA adaptor to the connector. See figure 2, page 10.)

⇒ **To connect a CCTV monitor:**

1. Install the monitor in its desired location.
2. Connect the Video In connector of the monitor to the **TV Out** connector of the UVG, using a cable with an appropriate connector (BNC or RCA) for the Video In connector of the monitor on one end, and a BNC male connector on the other end.

**Note:** If you are using a standard television set as a monitor, use the television's AV connector as the Video Input connector.

## Connecting the Mouse

If you wish, you can also connect the supplied mouse to the UVG when the video monitor is connected. When the mouse is connected, you can use it to control the screen display, select cameras, play recorded video, and activate PTZ controls (if available). For additional information, please refer to the *TVG System Guide*.

**NOTE:** Only the mouse supplied with the UVG is supported. If you connect a different mouse, the mouse may be damaged.

⇒ **To connect the mouse:**

- Plug the mouse into the **Mouse Connector** on the rear panel of the unit.

## Connecting a Switch

If you wish, you can connect a switch to the unit to change the display on the monitor. The switch must be connected to the Sensor 4 (**In4**) connector. For additional information, see *Connecting Sensors*, page 11 and refer to the *TVG System Guide*.

## Connecting Multiple Monitors

If you wish, you can connect multiple CCTV monitors to the UVG. For example, you may wish to have one monitor beside a check-out counter, and another in the manager's office.

To connect multiple monitors, you must use video splitters to split the connection. Bear in mind, however, that the image quality in each of the monitors will be slightly degraded. To correct this problem, you can use a video amplifier (booster) for each monitor. To ensure you have the correct equipment, consult a video equipment supplier.

Note, also, that only one mouse can be connected to the unit. This means that there is only one point of control over the display, and the display will be identical on all connected monitors.

---

## Setting Up Network Connections

The UVG has a built-in router that is used to connect the video-gateway component of the unit to external networks such as the internet or a cellular network. The router can connect to more than one external network at a time. For example, it can connect to a cellular network and to a LAN simultaneously.

The router manages a small local network (LAN) that can include up to four devices – the video gateway itself and up to three other devices. For example, you could connect a PC and a network printer to the router, and they would both be part of the UVG’s LAN. The devices connected to the router can connect to external networks through the router. In addition, the router can be configured to allow connections from external networks to the devices in the internal network.

**NOTE:** The router is configured using the UVG’s configuration utility. For additional information, please refer to the *TVG System Guide*.

## Connecting the UVG to an External Network

You can connect the router to a LAN, a cellular network, and/or a WiFi access point.

### ⇒ **To connect the UVG unit to an external network using an Ethernet cable:**

- Connect the **Ethernet Out** connector on the rear panel of the UVG unit to a LAN connection point (a hub, wall socket, or any other connection point) using the supplied Ethernet (network) cable.

### ⇒ **To connect the UVG unit to an external cellular network:**

- Connect a supported cellular modem that has a USB adaptor to one of the USB ports on the rear of the unit. To ensure good reception, use a USB extension cord to connect the modem to the USB port, and place the modem in a relatively exposed location as high up as possible. The USB extension cord should not be longer than 1.5 meters.

**Note:** It does not matter which USB port you use. Do not, however, connect more than one cellular modem to the UVG at one time.

**Note:** In most cases, remote client devices cannot connect directly to the unit over a cellular network. If you want to use a cellular network to connect to the UVG, you will probably have to use a SerVision proxy server. For additional information, please refer to the *TVG System Guide* or contact your vendor.

### ⇒ **To connect the UVG unit to an external WiFi network:**

- Connect a supported WiFi card with a USB adaptor to one of the USB ports on the rear of the unit.

**Note:** If the unit is already running, restart it after you connect the WiFi card.

**Note:** It does not matter which USB port you use. Do not, however, connect more than one WiFi card to the UVG at one time.

## Connecting Devices to the UVG’s Internal Network

Up to three IP-based devices can be connected to the UVG’s local network. The UVG’s router contains a DHCP server that can automatically assign IP addresses to devices that are plugged into its Ethernet ports. If you will not need to access a connected device remotely, you can configure the device to acquire its IP from this DHCP server. In this case, the device will be able to connect to the external network, but remote devices will not be able to access it. If you want to access the device remotely, you should manually configure its IP address and other network settings, as described below, and set up port forwarding for the device as described in the *TVG System Guide* under *Port Forwarding*.

**NOTE:** The video gateway component of the UVG automatically connects to the router component when the unit starts up. The router's DHCP server assigns an IP address to the video gateway component and port forwarding is automatically configured.

⇒ **To connect a device to the UVG's local network:**


- Connect the network connector of the device to one of the **Ethernet In** connectors on the rear panel of the UVG.

If you are configuring the device to enable remote access to it, set its network settings as follows. (For information about how to configure the network settings of the device, consult the device's documentation.)

Setting	Value
IP Address	Assign a static IP address to the device. The IP must be in the range 172 . 20 . 233 . 2 through 172 . 20 . 233 . 99.
Mask	255 . 255 . 255 . 0
Gateway	172 . 20 . 233 . 1
DNS	172 . 20 . 233 . 1

## Connecting the UVG to a Power Source

The UVG must be connected to a standard wall outlet using the supplied power supply cable. Once it is connected, it starts up automatically. During the start-up process, the LEDs on the front of the unit flash at various intervals. When the start-up process is completed successfully, the **Power** LED should display as a solid color and blink momentarily every second. (Depending on the configuration settings, it should either be solid orange and then blink green or solid green and then blink orange.)

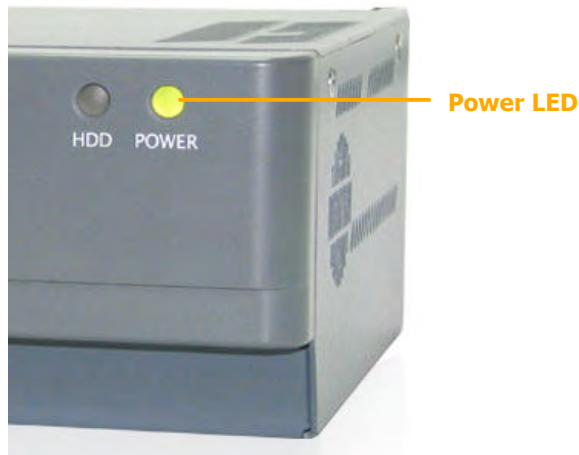

*Figure 15: Power LED*

**NOTE:** When the start-up process is completed, if the **Power** LED does not flash – it displays as a solid green or orange all the time – the start-up process was not successful. In this case, disconnect the unit from the power supply and then reconnect it.

**WARNING:** Only the power supply cable that came with the unit should be used. Use of a power supply other than the one provided in the package may cause irreparable damage to the unit. In particular, do not use the power supply cable from an HVG 200 unit, and, most important, never use the UVG power supply with an HVG 200, because this will ruin the HVG 200.

### ⇒ **To connect the UVG to a power source:**

- Connect the **Power** connector on the rear panel of the UVG unit to a standard wall socket using the supplied power supply cable (see *The UVG Package*, page 5). The unit starts up.

---

# SerVision

---

POB 45205 Jerusalem 91450 Israel

Tel: +972-2-535 0000 • Fax: +972-2-586 8683

[www.servision.net](http://www.servision.net) • [info@servision.net](mailto:info@servision.net)